



Crown Settings

Unscrew crown to access settings / screw crown for normal running

- I. Change date
- II. Set time and stop second hand